Gigaset Repeater HX

Quick and easy to set

LED behaviour



Left LED flashes twice per second. First connection (steps 2+3):

Press the pairing button on the router.

Left LED flashes

Connection mode (step 4): Wait 30 seconds. If the LED is still flashing, it

has not been possible to establish a connection. Position the repeater closer to the router.

Right LED flashes HD-Phone in use

*Note: The Repeater can only be connected if the DECT PIN is set to the 0000 default.

> http://internetbox.home > Telephony & DECT > PIN






Your router must be installed and switched on.






Press the pairing button on your router.

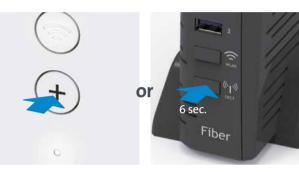

Wait for the repeater to pair with the router. The left repeater LED lights up green constantly.



Now position the repeater between your router and the place for your HD-Phone.

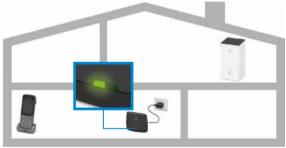

Connect the repeater to the power and wait

If the left LED still flashes, the repeater is too far away from

More information for Swisscom customers is available at www.swisscom.ch/hdphones-help


HD-Phone

HD-Phone

Room 2



Your Gigaset Repeater HX is now set up.

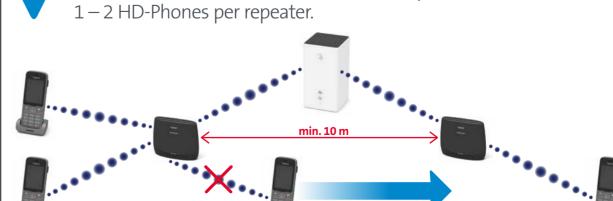

Note: You can install a maximum of two repeaters and connect

Gigaset Repeater HX

Please make sure that more than two HD-Phones are not connected to a repeater. The HD-Phones connect automatically to the strongest DECT signal. If more than two HD-Phones are connected, there is a connection conflict with incoming calls.